
Wind Sign II & Wind Sign Deluxe




"Quick-Change"™ Frame Assembly Instructions

See Reverse Side for Snap Frame Instructions 1-866-284-1541

Hardware Provided

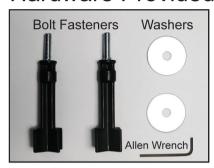

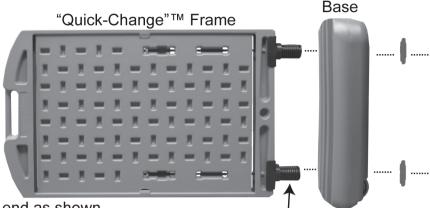


Spring Assembly

- 1. Lay frame on its side and base on end as shown
- 2. Place washer on bolt fastener
- 3. Insert bolt fastener through hole in bottom of base
- 4. Align spring assembly with bolt fastener
- 5. Screw bolt fastener into bottom of corresponding spring assembly, tighten
- 6. Repeat for second bolt fastener, washer, and spring assembly
- 7. Turn sign frame upright, with base flat on the ground
- 8. Take Allen wrench and tighten set screw inside silver collar on spring shaft. silver collar should be placed at the lowest possible position on the spring shaft at the bottom of the opening
- 9. Repeat for second set screw in silver collar

STEPS 8 & 9 set screw in silver collar position silver collar as far down on spring shaft as possible, then tighten the set screw with the Allen wrench

Sign Insertion Instructions

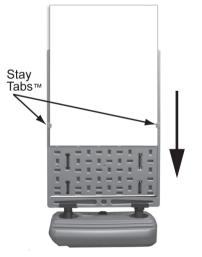

1. Slide sign down through the stay tabs™



2. Slide through, pulling sign in front of bottom slot until sign hits the base

CAUTION: Sign Substrate should weigh no more than 5 lbs. per side.



3. Push sign up into top slot



4. Slide sign down into bottom slot

Fill with up to 115 lbs. of sand to achieve desired wind resistance. Sand should be level inside of base to maintain optimum balance. Shake gently to level sand.



Unscrew cap from fill hole and pour dry sand into base.

Wind Sign Deluxe "Quick-Change" Frame

	Pounds of Ballast	Head-on	
		Wind	
		Resistance	
	70 lbs.	40 mph	
	100 lbs.	45 mph	
	115 lbs	50 mnh	

Wind Sign II "Quick-Change" Frame

Pounds of	Head-on	
Ballast	Wind	
Dallast	Resistance	
70 lbs.	40 mph	
100 lbs.	55 mph	
115 lbs.	60 mph	



To move sign stand from place to place - grab handle, tilt stand back on wheels, and push sign to move it